

Zone Valve Boxes with Remote Gas Sensors

Zone valve boxes shall be Ohio Medical series. Each zone valve box shall comply with NFPA® 99 and will consist of a recessed steel box, removable window, and valves with remote gas sensors to work with Ohio Medical area alarms.

FEATURES

- Full port design
- Blow-out proof stem
- Cleaned for medical gas service.
- Teflon seals
- Dual gauge port on pipe extension
- Third port for Remote Gas Sensors



An installation kit (263003) will be shipped for each valve for field installation. The kit will have a quick setup guide with installation recommendations for the valve to sensor orientation. Two oxygen cleaned (per CGA G-4.1) street elbows will allow for different configurations of zone valves to specified remote gas sensors. Different combinations will allow gas sensors to fit different sized ball valves.


Also provided are two lever style wire connectors to easily establish communications from the sensors to an Ohio Medical Area Alarm. A zip tie and mounting pad provide the means of securing loose wires and neatly tying them to the interior of the zone valve box. An access hole and grommet are used on the side of the valve box to allow access to alarm wires.



Ohio Medical Area Alarm



Remote Gas Sensor Available

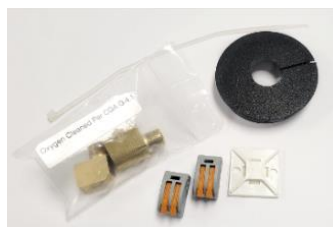

Kit Content PN 263003



Ball Valve Configurations Available