

SC750-T2-H120 Claw Medical Vacuum System

System is NFPA compliant and has modular construction and interconnecting piping.

PUMP MODULE

Oil-less rotary claw air cooled vacuum pump with NEMA motor. Each pump module is equipped with an inlet filter, check valve, pump isolation valve, internal discharge silencer, and temperature switch.

SYSTEM CONTROLS

The UL listed soft start electrical control panel features a high-definition color touch screen that can be set up externally without the use of toggle switches. The panel displays multiple conditions, including pump running status, elapsed hours, vacuum level, and audio/visual alarms.

Standard features include lag alarm, automatic pump alternation, adjustable minimum run timer, adjustable vacuum settings, adjustable screen brightness, alarm history registry, and data logging. The panel has standard dry contacts and Modbus interface with building management systems. Ethernet and BACnet are available as options. The panel's maintenance menu includes service items and maintenance warnings, and it is programmed for both English and Spanish languages.

VACUUM RECEIVER

Constructed to ASME standards and rated for full vacuum. Equipped with valved bypass, high visibility vacuum gauge, source isolation valve, and a manual drain valve. Mounting pads and flex connectors supplied for field installation.

KEY OPTIONS

Variable Speed Drive Electrical Panel
O2 Assured Oil for gearbox
Configurable for Lab or Industrial Applications
Gas Purge System for Lab use

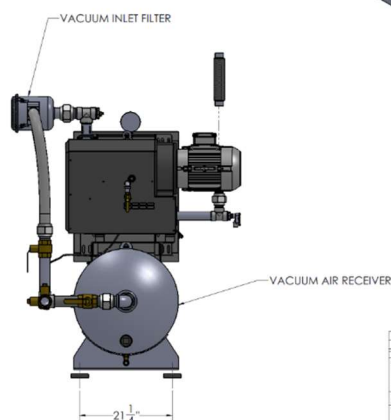
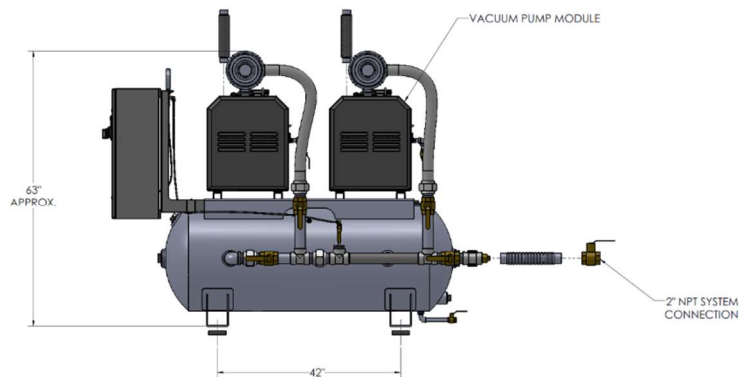
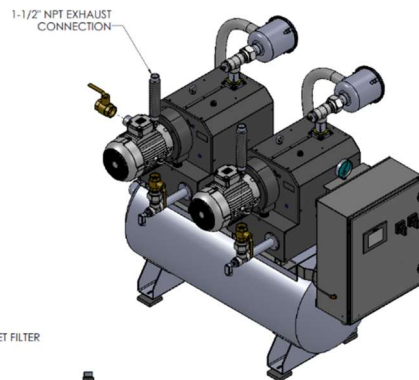
Configuration	Duplex Tank Mount
System Capacity*	65 SCFM @ 19" Hg. 60 Hz. 54.1 SCFM @ 19" Hg. 50 Hz.
Horsepower (Each Pump)	7.5 HP
Horsepower (Total System)	15 HP
Available Voltage	208/230/460 v. 3 phase 60 Hz. 380 v. 3 phase 50 Hz. Contact Factory for other voltages
Full Load Amps 3 ph.	208 volts: 49.6 230 volts: 45.1 380 volts: 27.4 460 volts: 22.6
Tank Size	120 gallon horizontal
Medical Filter Bank (option)	BOM-MED FB-2





Click here for pump specifications
and industry-leading parts support.

*System capacity is stated with one pump in reserve per NFPA. Capacity based on operation at sea level. For higher altitude, contact factory for adjusted capacity.

SYSTEM LISTED ARE 460V. IF ANOTHER VOLTAGE IS REQUIRED, USE THE FOLLOWING PART NUMBERS.			
VOLTAGE	SYSTEM P/N	PUMP MODULE P/N	MOTOR OVERLOAD PROTECTION
208-60-3	SC730-208-T2-H120	100-0132	214557
230-60-3	SC730-230-T2-H120	100-0132	214557
380-50-3	SC730-380-T2-H120	100-0132	214528



Q1	N/A	INITIAL RELEASE	06/01/22	J.C.
HOW	REPORTED	DESCRIPTION OF EVENT	DATE	BY
ANALYST IDENTIFIED SUSPECTS (CONTINUED) HAD IN PHONE CALL 5.4.1 01:50:00 5.4.1 01:52:00 5.4.1 01:53:00		J. Gutierrez 06/01/22 06/01/22 06/01/22	06/01/22	 Ohio Medical Emergency Training for Life
		06/01/22 06/01/22	06/01/22	06/01/22 06/01/22
N/A		DRY ROTARY CLAW VACUUM PUMP SYSTEM (C7C) 7.5HP DUPLEX TANK MOUNT		
N/A		SCALE 1:1 SHEET 1 OF 1		

