


Oil-less Low Pressure Rotary Scroll Air Compressors

Ohio Medical oil-less scrolls provide a clean source of compressed air up to 115 psi. High capacity 7.5 HP and 10 HP models are offered for medical, lab, and industrial applications. Standard modules are available, while custom modifications can be provided per customer requirements. Bare scroll air ends are applicable for Ohio Medical and Powerex scroll compressor systems. Complete modules with motors, belts, belt guard, aftercooler, relief valve, and temperature switch are mounted on a common base for easy retrofit in the field.

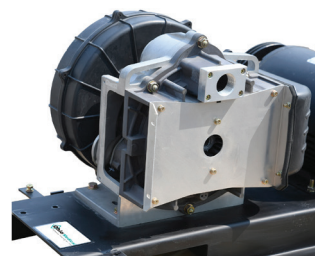

Bare Compressors

	Low Pressure Air End	Low Pressure Air End
HP	7.5 HP	10 HP
CFM	27.7 CFM/50 psi 27.4 CFM/100 psi	34.3 CFM/50 psi 33.8 CFM/100 psi
Part #	230153	230153
RPM	2560	3200
Inlet	1"	1"
Discharge	3/4"	3/4"
Weight	84 lb.	84 lb.

Complete Compressor Modules*

	Low Pressure Module	Low Pressure Module
HP	7.5 HP	10 HP
CFM	27.7 CFM/50 psi 27.4 CFM/100 psi	34.3 CFM/50 psi 33.8 CFM/100 psi
Part #	100-0228	100-0229
RPM	2560	3200
Inlet	1"	1"
Discharge	3/4"	3/4"
Weight	285 lb.	295 lb.

* includes 230/460 volt 3 phase motor, relief valve, aftercooler, N.C. temperature switch, belts, and belt guard, mounted on steel base.