


Rotary Claw Vacuum Pump Modules

Ohio Medical claw vacuum pumps are available as complete modules for quick installation. They include key components needed on both industrial and medical applications. Each claw module features a Nema motor, inlet vacuum filter, inlet check valve, and exhaust temperature switch. (N.O. standard, N.C. available). The exhaust piping includes a discharge silencer, as well as an isolation valve. Bolt down vibration damping mounts are provided. Standard modules include 3500 RPM motors, while the HS versions are fitted with 1750 RPM lower HP motors. The HS models feature reduced sound levels and lower heat generation.

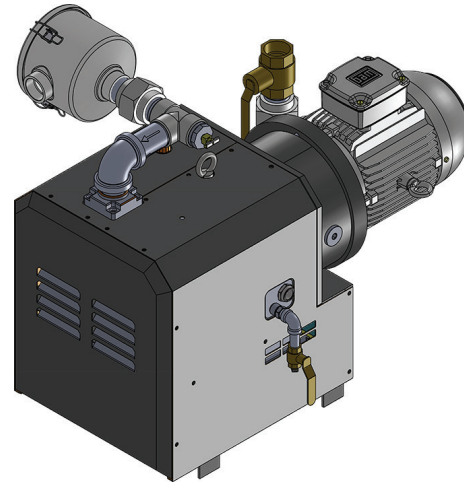

Standard

Part #	100-0125	100-0130	100-0131	100-0132	100-0133	100-0134	100-0135
Pump Model	C2	C3C	C5C	C7C	C10C	C15LC	C15C
Motor HP 60 Hz	2	3	5	7.5	10	15	15
RPM 60/50 Hz	3500	3500	3500	3500	3500	3500	3500
Inlet Connection	1"	1 1/2"	1 1/2"	2"	2"	3"	3"
ACFM @ 0"	40	70	112	197	220	283	352
SCFM @19" Hg.	12	23	39	65	75	95	128

HS Series

Part #	100-0136	100-0137	100-0138	100-0139	100-0140
Pump Model	C3C-HS	C5C-HS	C7C-HS	C10C-HS	C15LC-HS
Motor HP 60 Hz	2	3	5	7.5	7.5
RPM 60/50 Hz	1750	1750	1750	1750	1750
Inlet Connection	1 1/2"	1 1/2"	2"	2"	3"
ACFM @ 0"	35	56	99	110	141.5
SCFM @19" Hg.	11.5	19.5	32.5	37.5	47.5